

Operating Instructions

Suitable for the models of E402 series and E403 series

Safety precautions

Explanation of symbols



Refers to potentially dangerous situation that may cause serious injury or death .

DANGER



Refers to potentially dangerous situation that may cause injury or property losses .

NOTICE



Refers to forbidded to do .

FORBID



Refers to abide by the rules .

MUST BE ABIDED



 
The supplier shall not be liable for any loss arising from the failure to comply with the following regulations

- 1.This equipment is "I" type electric appliance, must be completed connected to the grounding system.
- 2.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 3.This equipment is electric appliance, please do not be installed at the place where can easily be splashed with water or high temperature. Please install exhaust fan or ventilation opening to make sure there is a good ventilation when using at Bathroom.
- 4.This appliance can be used by children below 3 years but requi constant observation by an adult in the immediate proximity of the child.This appliance can be used by children aged from 3 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 5.The appliance will be permanently connected to the water pipe. Please do not remove the water pipe assembly except for installation and maintenance.
- 6.The portable residual current device(PRCD) is optional. The PRCD must be reliably fixed.

Safety precautions



FORBID

1. Do not insert or remove power plug with wet hands. Otherwise there is a risk of electric shock.
2. Do not damage the power cord and plug. Otherwise there is a risk of electric shock, short-circuit and fire.
3. Do not use the loose socket. Otherwise there is a risk of electric shock and fire.
4. The power supply must be accorded with regulation. Otherwise there is a risk of damage the product and fire.
5. Do not disassemble, repair or reassemble the product. Otherwise there is a risk of electric shock and fire.
6. Do not place a stove or a cigarette near the product. Otherwise there is a risk of fire.
7. Make sure not to splash water, detergents or urine on the product and the power plug. Otherwise there is a risk of electric shock, damage the product and fire
8. Do not turn the product upside-down. Otherwise this might cause product damage.
9. Do not bend or distort the inlet hose. Otherwise there is a risk of water leakage.
10. The new hose-sets supplied with the appliance are to be used and the old hose-sets should not be reused.





Technical Specification

MODEL		E402-W011	E402-F011
		E403-W611	E403-F011
Wash	Rear Wash	●	
	Female Wash	●	
	Massage	●	
	Adjustable Water Temperatur	OFF/5 Steps (Default 3rd)	
	Adjustable Flow Rate	5 Steps (Default 3rd)	
	Adjustable Spray Position	5 Steps (Default 5th)	
Warm Air	Air Drying	●	
	Adjustable Air Rate	—	
	Adjustable Dryer Temperatur	OFF/5 Steps (Default 3rd)	
Heated Seat	Heated Seat	—	
	Adjustable Seat Temperature	—	
Hygiene	Deodoriser	●	
	Nozzle Automatic Cleaning	●	
	Nozzle Manual Cleaning	●	
	Descaling	●	
	User Mode	2 Users	
	Remote Control	D81-01	
	Night Light	●	
	Breathing Lamp	●	
	Soft Closing Seat And Cover	●	
	Body Knob	●	
Wash Device	Rimless Toilet	●	
	Installation of the toilet	Wall-hung/Pedestal	
Water Supply Connector		G 3/8	
Rated Voltage		AC220-240V, 50/60HZ	
Power		1170W	
Length Of Power Cord		1.8m	
Water Supply Pressure		0.07~0.75MPa(0.7~7.5Bar)	
Water Supply Temperature		4~35°C	
Ambient Temperature		4~40°C	
Protection Degree		IPX4	
Dry Device	Flow Rate	350~650mL/min	
	Water Temperature	31~39°C	
	Wash Cycle Time	3 Minutes	
	Heating Mode	Tank	
	Heater Power	1200W	
	Safety Device	Thermal Cutoff Fuses\Liquid Level Switch\Thermostat	
	Backflow Prevention	Air Gap of AB type	
Deodorization	Speed Of Air	≥4m/S	
	Dryer Power	350W	
	Dry Cycle Time	3 Minutes	
	Warm Air Temperature	35~50°C	
	Safety Device	Thermal Cutoff Fuses\Thermostat	
Heated Seat	Deodorization Mode	Diatom	
	Deodorization Cycle Time	15Minutes	
	Heated Power	—	
Heated Seat	Seat Temperature	—	
	Safety Device	—	
	Frequency Range	2460MHz	
Remote Control	Maximum RF Output Power	-10dBm	
	Type of batteries	1.5V LR03 AAA	
	Number of batteries	Two Pieces	
	Other Safety Device	Residual Current Devices	
	Net Weight	35Kg	
Dimension		593*384*388 mm	

Technical upgrade will be edited into the new version instruction without additional notice.
Please follow the real if it is different from the nominal in shape ,color and accessories.





Technical Drawing

E402-W011

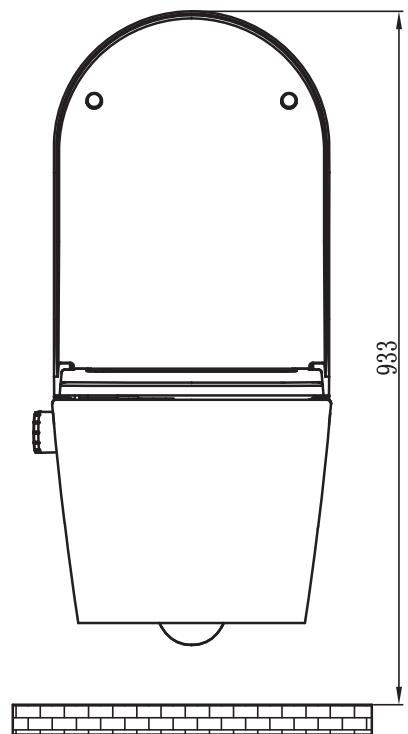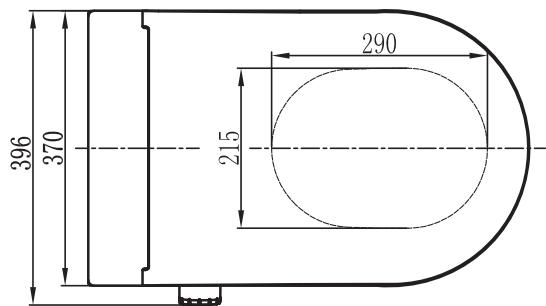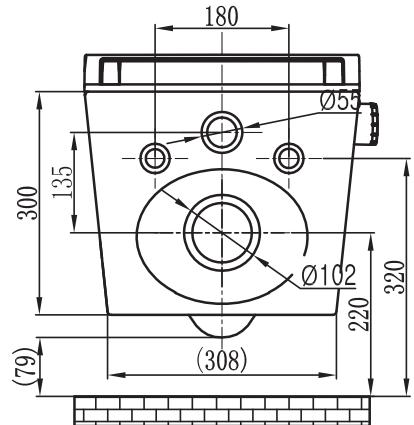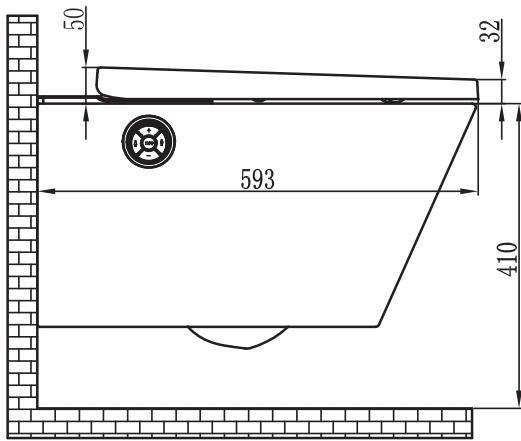





Technical Drawing

E403-W611

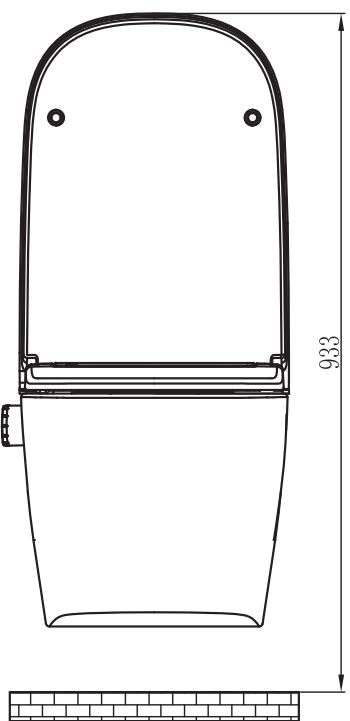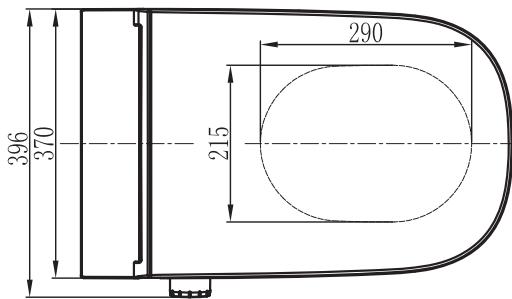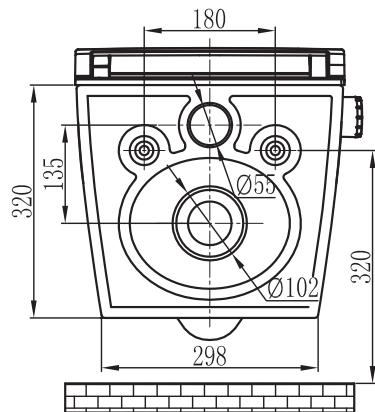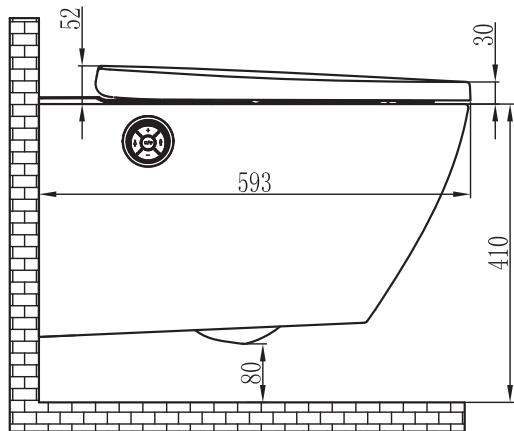





Technical Drawing

E402-F011

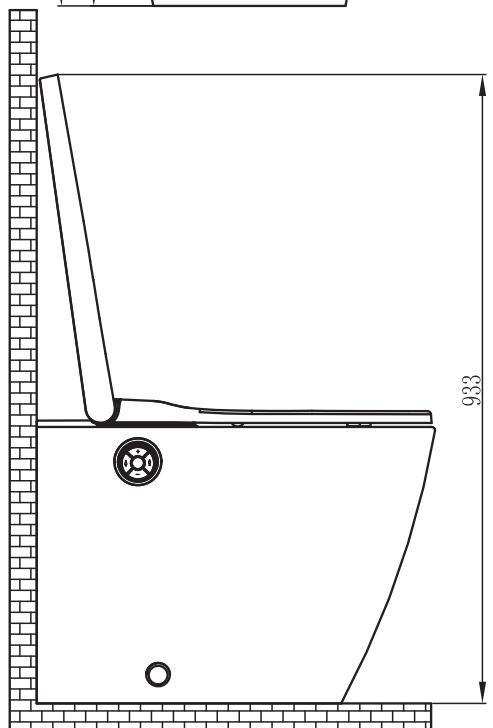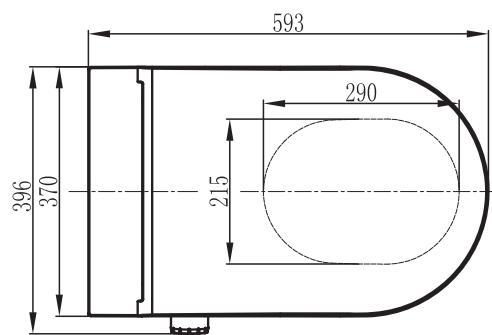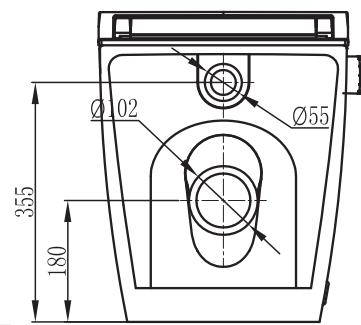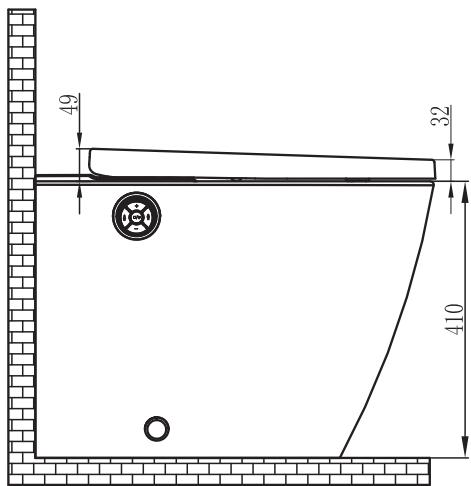


Technical Drawing

E403-F011

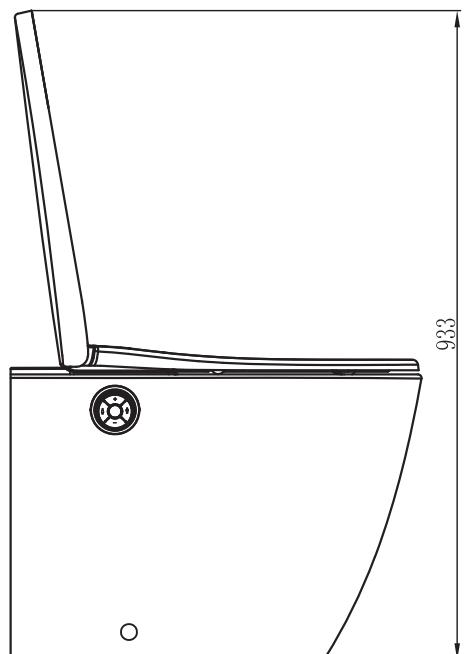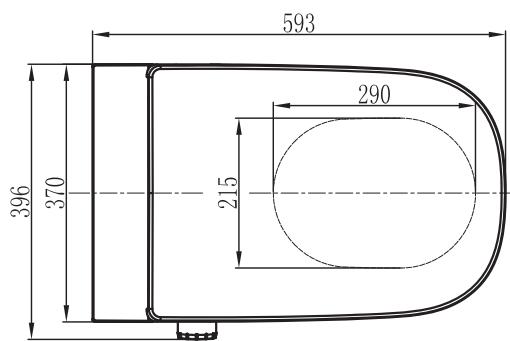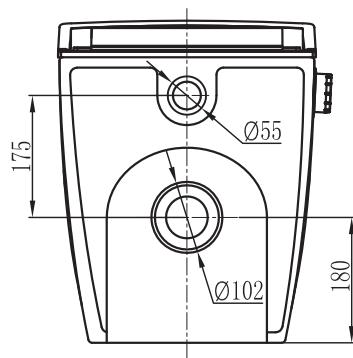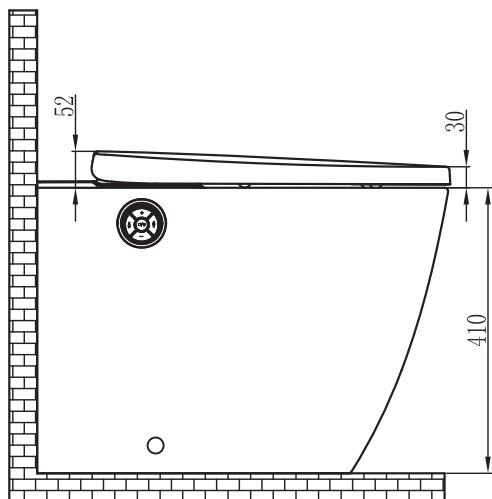


Overview

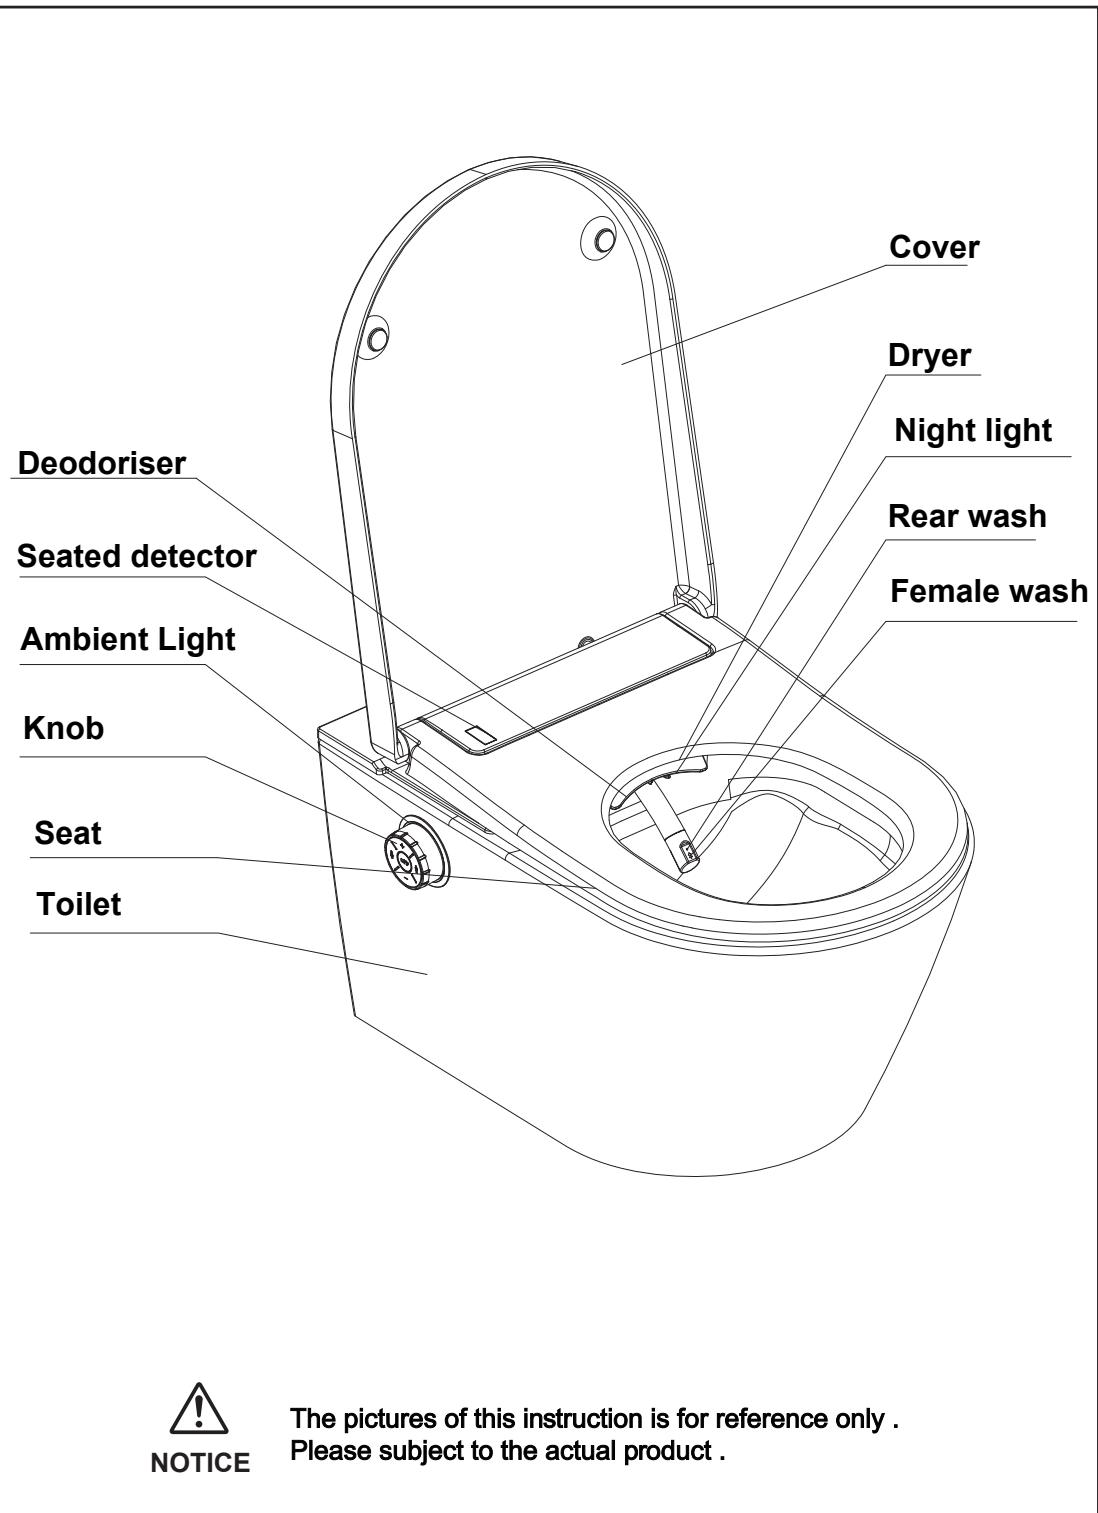

NOTICE

The pictures of this instruction is for reference only .
Please subject to the actual product .

Remote Control

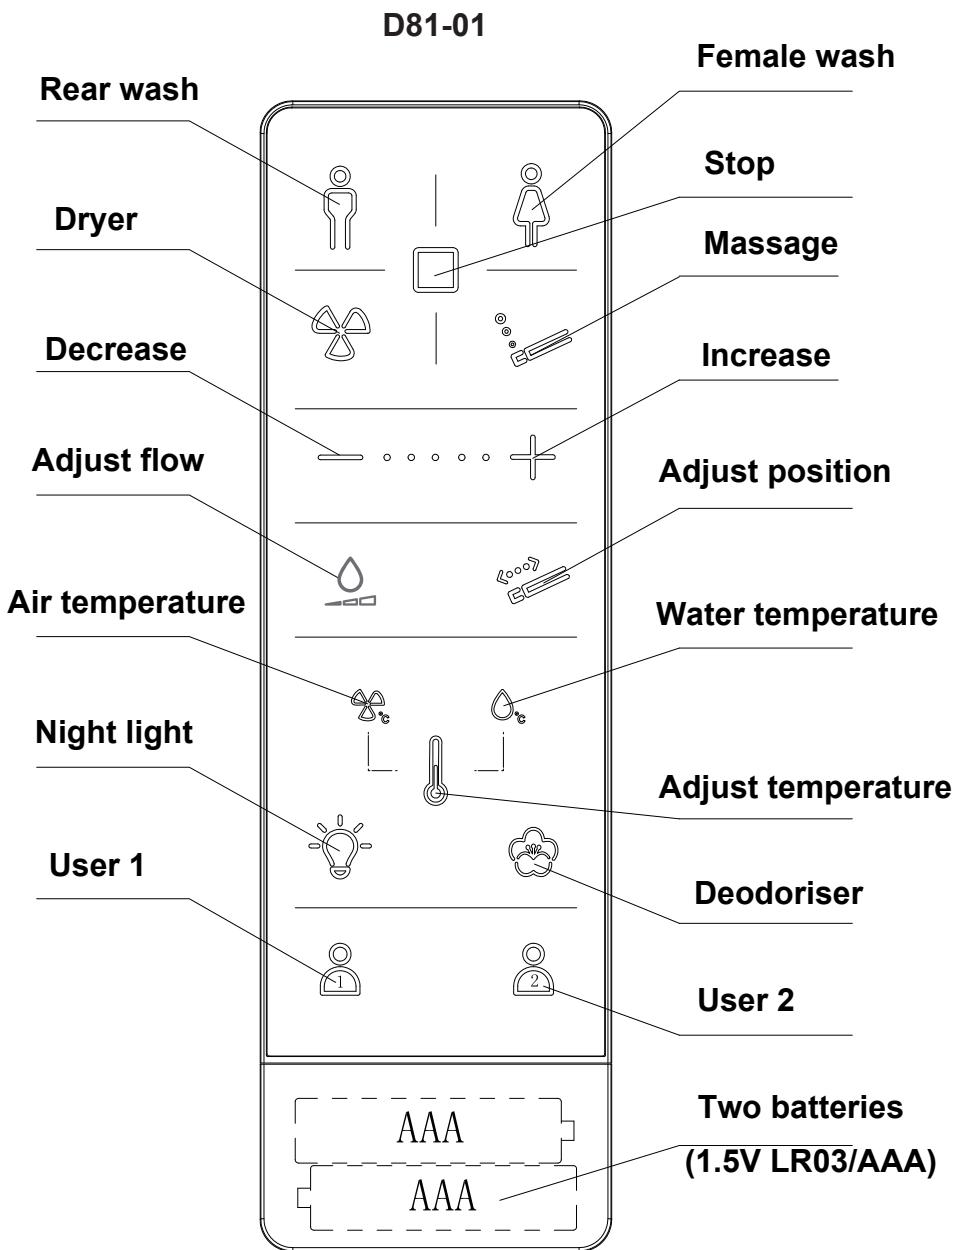


1. Before using, the remoter requires 2 batteries (type 1.5V LR3/AAA)
2. The followed remote-control operation is only for the model with the remote control

(The software updates will not be notified. Please follow the real remote control.)

Rear wash /Female wash

● Be seated


Press the "Wash" button on the remote control or on the knob then it start to wash. It will stop after 3 minutes . You can stop washing during this period by pressing the "Stop" button.

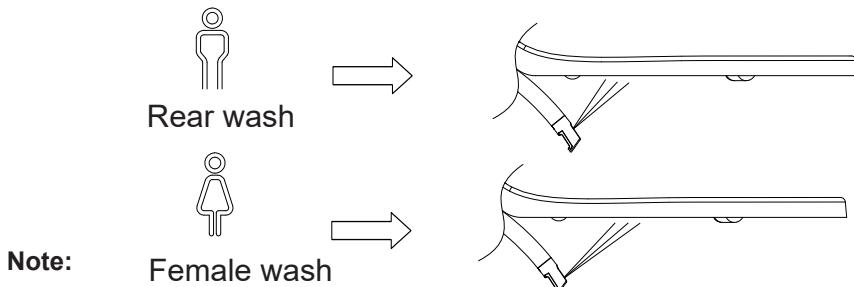

1. While Rear wash or Female wash , it will wash at the fixed position for about 10 seconds , and movable wash for about 18 seconds , then regain to the fixed position until to the end .
2. If you press the "Rear wash " or "Female wash" on the knob it will be drying for 3 minutes when the washing is over.

Dry Operation

 ● Be seated




Press the "Dry" button on the remote control then it start to dry. It will stop after 3 minutes

OR

● Be seated

- It is not in the process of Rear or Female washing

Press the middle button of the knob then it start to dry . It will stop drying after 3 minutes

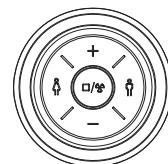

NOTICE All the operation is just for the model with all features . If the model what you bought has no the feature , please ignore the corresponding operation .

Massage Operation

- In the process of Rear or Female washing



Repeatedly press the "Massage" button on the remoter until to choose your desired spray mode

Oscillating : when one indicator light is on

○

Pulsating : when two indicator lights are on


○ ○

Oscillating + Pulsating : when three indicator lights are on

○ ○ ○


OR

Press the "rear wash" or "female wash" button on the knob (correespond to the current wash status),then it will be oscillating. Press it again the wash will be on the different massage mode.

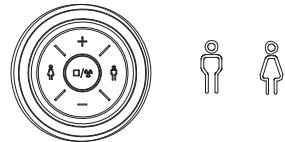

Stop Operation

 
- In the process of Rear washing , Female washing or drying



Press the "Stop" button on the remote control it will stop washing or drying .

OR


Press the middle button of the knob it will stop washing or drying

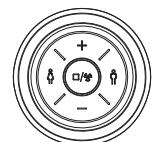

Adjust water flow rate


- In the process of Rear or Female washing

 Press the " Adjust flow " button on the remote control , then press the "Decrease" or " Increase " button to adjust the flow rate .



OR


You can operate by rotating the knob . The flow rate will increase in the clockwise direction and decrease in the anticlockwise direction .

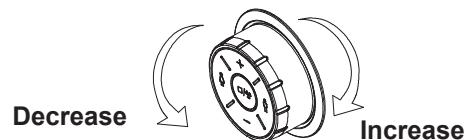

Adjust the nozzle position


- Default 5 th
- In the process of Rear or Female washing

Press the " adjust position " button on the remote control, then press the "Decrease" or " Increase " button to adjust the nozzle position forward or backward.

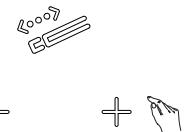

OR


You can operate by pulling and rotating the knob . The nozzle position will be forward in the clockwise direction and be backward in the anticlockwise direction .

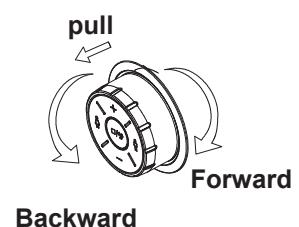

Adjusting temperature

1. Adjusting water temperature


- In the process of Rear or Female washing

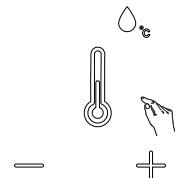

Repeatedly press the " Adjust temperature " button on the remote control until the water temperature icon is lit, then press the " Increase " or " Decrease " button to adjust water temperature .

OR


Press the "+" or "-" button on the knob then the water temperature will be increase or decrease

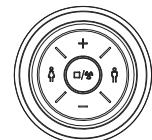

2. Adjusting air temperature

- In the process of drying

Repeatedly press the " Adjust temperature " button on the remote control until the air temperature icon is lit, then press the " Increase " or " Decrease " button to adjust air temperature .

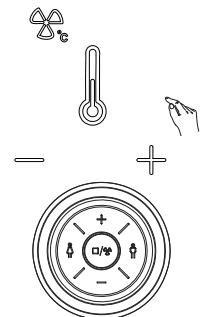

OR

 
Press the "+" or "-" button on the knob then the air temperature will be increase or decrease

Dedorize Setting

- Smart mode for the deodorization by default . It is on when the user sits down and it will be off after one minute when the user leaves .
If there is no operation of washing or drying during being seated , it will be off after 15 minutes .

Repeatedly Press the " Deodorization " button on the remote control to open or close the deodorization .

Close mode : when one indicator light is on




Smart mode : when two indicator lights are on



OR

- Open the cover and be seated
- Without working

Pull out the knob and turn clockwise . The deodorization will be off . Turn clockwise again then it will be on .

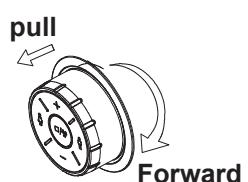

Light Setting

- Always on mode for the night light by default



Repeatedly press the "Night light" button on the remote control to choose the different mode.

Close mode : when one indicator light is on

○

Always on mode : when two indicator lights are on


○ ○

Smart mode : when three indicator lights are on

○ ○ ○

OR


Open the cover and seat and don't be seated. Pull the knob and rotate it in the anticlockwise direction. The night light will be on the different mode just as "close", "always on", "smart".

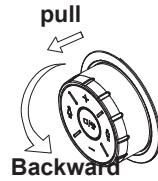

NOTE: The "smart" mode refers that the night light will light up in a dark environment and light off in a bright environment.

Sound setting

- The sound is on by default. There is a BEEP when the bidet has received commands or signals
- Open the cover and be seated
- Without working

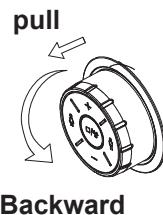

Open the cover and be seated.


Pull out the knob then turn it in the anticlockwise direction.

The sound is off with a long BEEP. Turn again and it will be on with a short BEEP.

Ambient light setting

- Always on by default


Open the cover and be unseated , pull the knob and rotate it in the clockwise direction .The ambient light will be lighted off . It will be lighted up when rotating it in the clockwise direction again

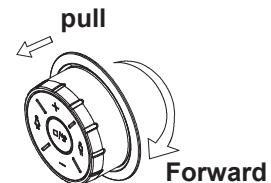

User Setting


1. Save the user setting

 After well adjusting the settings of water flow rate , temperature and nozzle position , keep pressing the " User 1" or " User 2" button on the remote control for more than 3 seconds to save the settings to "User 1" or " User 2 "



2. Retrieve the user settings

 Before washing or drying press the "User 1" or " User 2" button on the remote control , then operate washing or drying . The flow rate , water temperature ,nozzle position , and air temperature will be the same as saved .




Power standby Setting

- In the state without seating

Keep pressing the middle button of the knob for more than 6seconds , it will go into power standby mode .

Press again the button for more than 6 seconds to restart it .

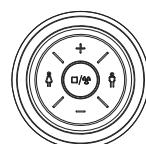

Care and cleaning

● General care and cleaning recommendations


Maintaining interval	Maintaining activity
Daily	Remove water drops with a soft ,lint-free cloth to avoid limescale stains
Weekly	Clean all surfaces and corners .Clean the spray nozzle if required.See "Nozzle cleaning "
Monthly	Clean the WC ceramic appliance with a low acidic cleaning agents
Every half year	Replace the filter if required.

● Cleaning agents and tools


For E-bidet



 soft cloths ,lint-free cloths



mild cleaning agents
that are kind to the skin.

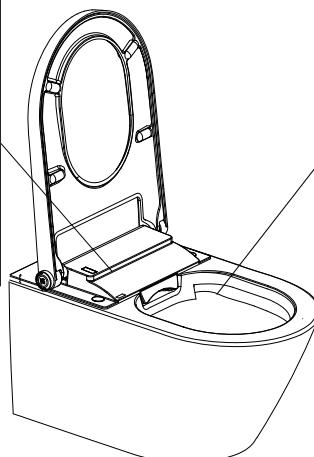

For WC ceramic appliance



soft cloths ,lint-free cloths



low acidic cleaning
agents .e.g. heavily
diluted citric acid.



toilet brush.



Do not use the cleaning agents of strong acid and alkali to clean the E-bidet ;
Do not use the hard brush .e.g. toilet brush nylon brush to clean the WC ceramic
appliance ;
Do not use the metal brush.

FORBID

Tank self-cleaning



If the washing function of the smart toilet has not been used for more than 72 hours, when it detects that someone is seated, it will automatically start the tank self-cleaning for approximately 3 minutes.


After the self-cleaning is completed, it will return to normal operation. During the self-cleaning, other buttons on the remote control and the knob are inoperative but if the stop button is pressed, tank self-cleaning will be exited.

Nozzle cleaning

- The nozzle will be cleaned before washing and after washing .


The operation of manual cleaning is as follows

Open the cover and seat then rotate the knob in the clockwise direction . Then the nozzle will extend with cleaning water. It will return after 5 minutes or press the " stop " button .

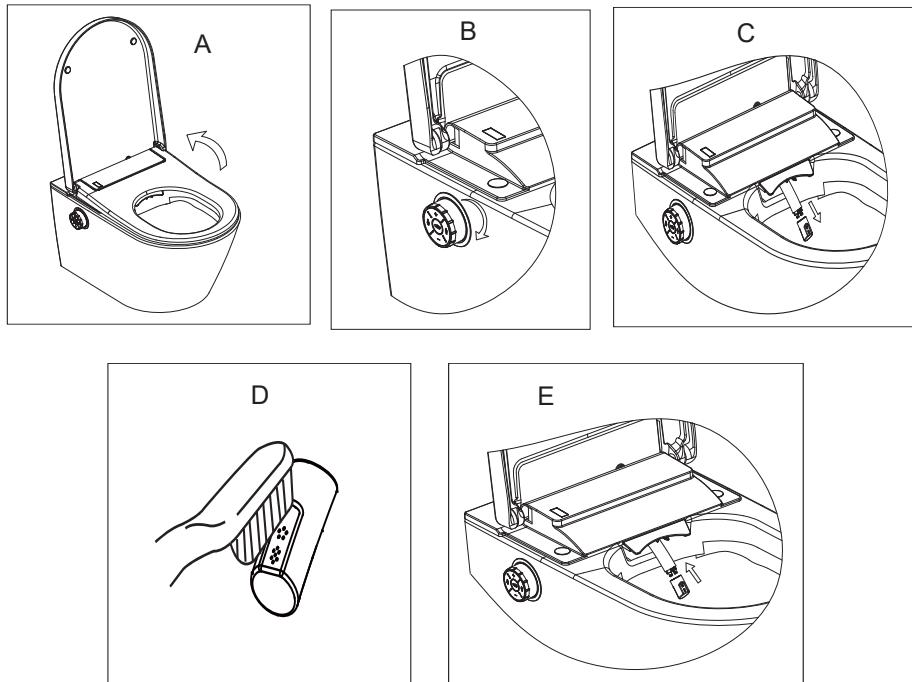

Replacing the filter


- The filter has a service life of half a year . This is depended on the environment of water. The filter should be replaced when the wash flow is too small .

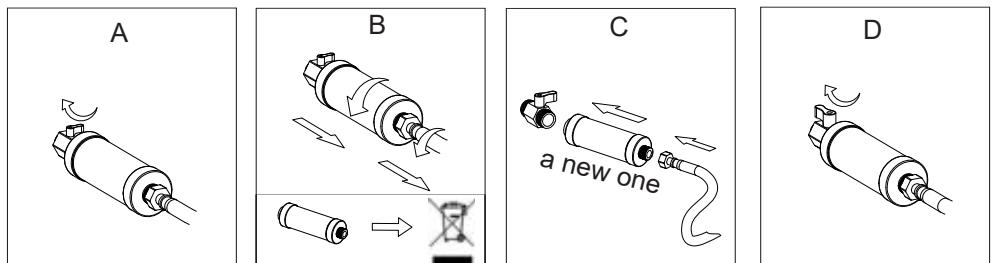

Drain the water tank



1. The water and power must be cut before you disassemble the E-Bidet
2. Do not invert or tilt it before you finish draining the water tank

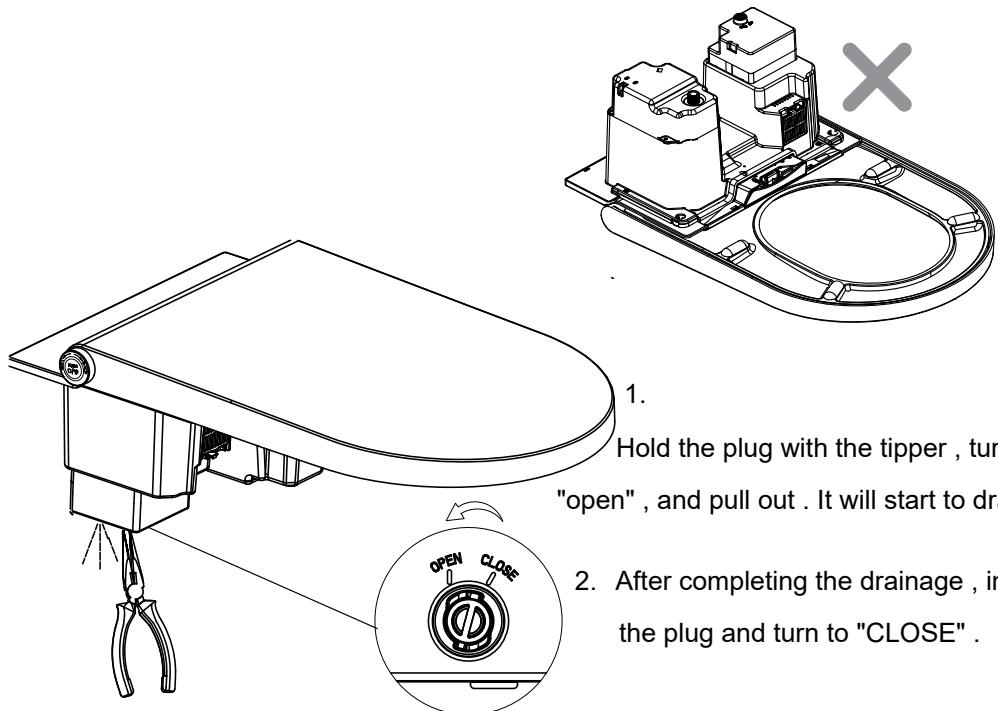


Release and reassemble cover & seat


A




B

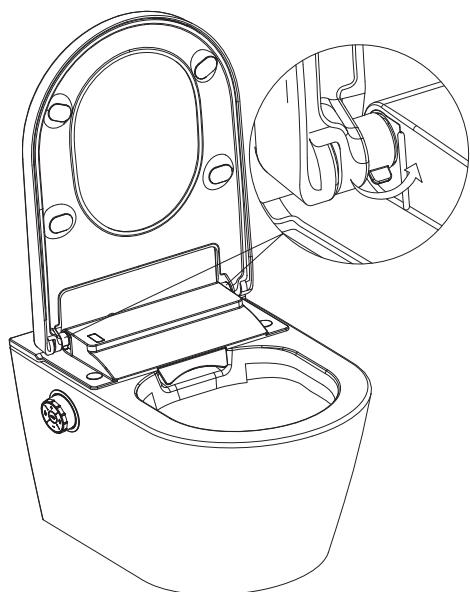

C


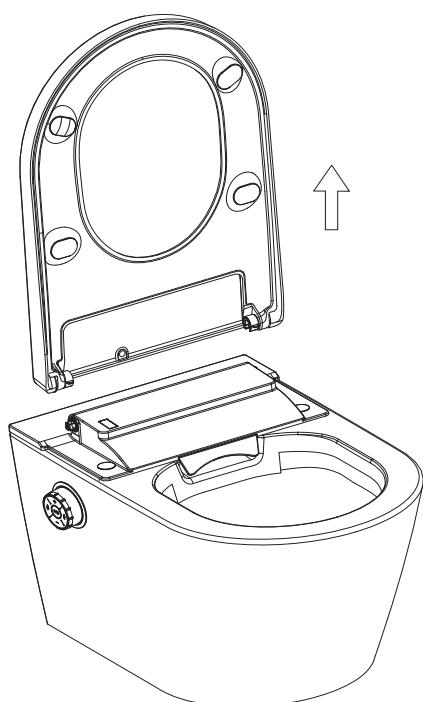


D Reassemble

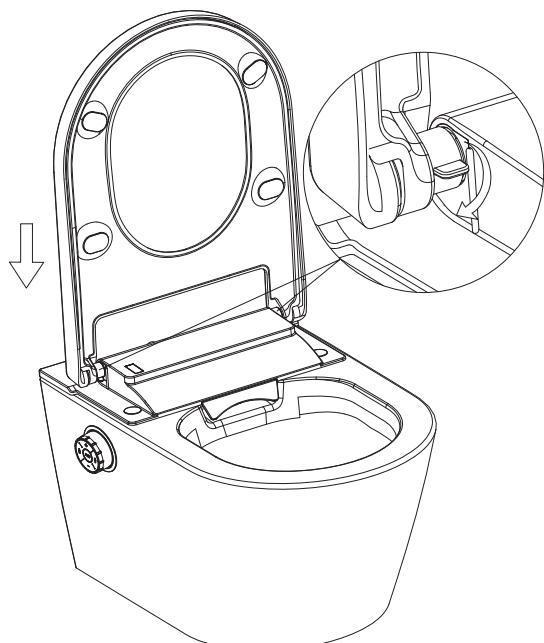

One-ON-One Setting

  - Install several electronic bidets in the same area, if you want each remote control to control the specified electronic bidet, please complete setting as per following steps.

1. Open both cover and seat and without seating. Set the night light to the "close" model (just see the "Light setting"). 
2. Press the "stop" button and "adjust temperature" button on the remote control at the same time, and keep pressing for a few seconds, the indicator lights of "-,+ buttons are on. 
3. Release the "stop" button, but keep pressing the "adjust temperature" button 
4. Press the "USER1" and "USER2" in order, and then release the "adjust temperature" button. At this time, the lighted indicator is the current ID code of product 
5. By pressing "-", "+" buttons to switch different product ID code with corresponding indicator lights up. There are 32 ID codes in total. It is on the first code by default. 
6. After selecting the product code ,press "stop" on the knob,then press "stop" on the remote control.when long "beep" sound heard,the setting is finished. 


Replace the batteries

- The remote control requires 2 batteries (type 1.5V LR3/AAA).
- When the user lights flash continuously , please replace the batteries in time.



NOTICE

1. Non-rechargeable batteries are not to be recharged
2. Rechargeable batteries are to be removed from the appliance before being charged
3. Different types of batteries or new and used batteries are not to be mixed
4. Batteries are to be inserted with the correct polarity
5. The exhausted batteries are to be removed from the appliance and safely disposed of
6. If the appliance is to be stored unused for a long period, the batteries should be removed
7. The supply terminals are not to be short-circuited

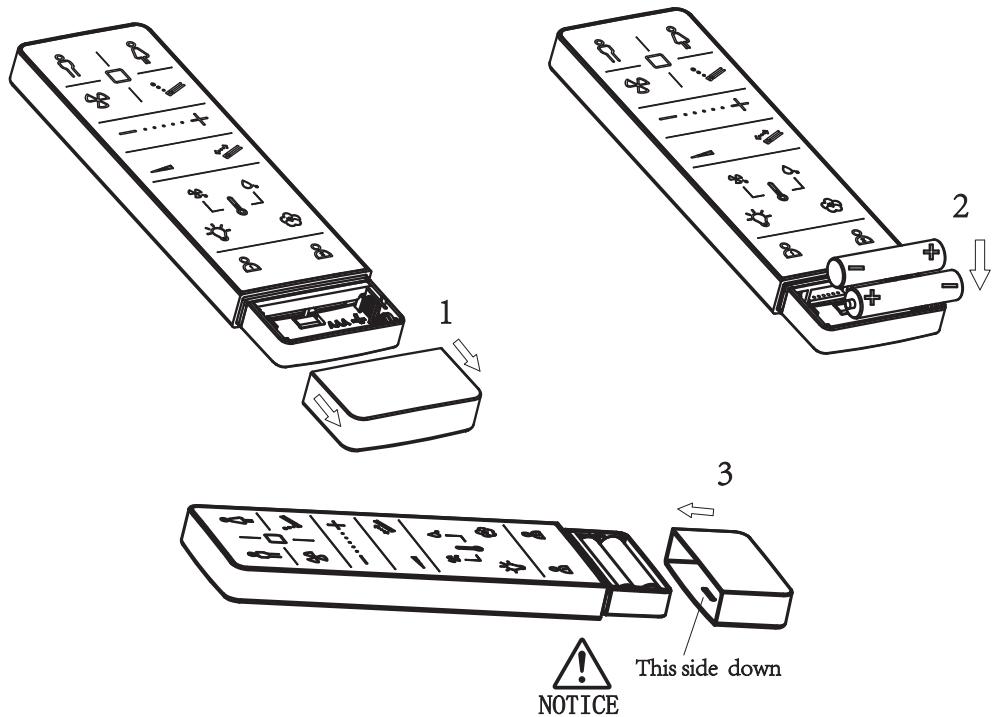

Troubleshooting

Problem	Potential cause	Suggested action
The washing can not work	1. The power supply may not be opened	Please turn on the power
	2. The water supply may not be opened	Please open the inlet water valve,or check if there is a water outage
	3. The filter may be blocked	Please replace a new filter .It has a service life of approx. half a year
	4.Maybe not in the seating state	Please sit on the seat and adjust sitting position
	5.Maybe the cover is closed	Please open the cover and sit on the seat
	6.Maybe it is not used for more than 72 hours	Not used for more than 72 hours ,when the user operates the washing ,it will open the self-cleaning for about 3 minutes. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning
The nozzle goes back suddenly	1.The washing cycle is 3mins. The nozzle will stop spraying after 3mins ,and then go back.	This is normal and please re-press the "wash" button to start washing again
	2.There may be some problems of water supply	Please check if there is a water outage
	3.Maybe the seated sensor detects the user left the seat	Please adjust sitting position
	4.Maybe the cover is closing	Do not put down the cover when it is washing
Low water flow rate	1.The water flow rate may be set at low grades	Please increase the flow rate as per "adjusting water flow rate" of operating instructions
	2.The water supply pressure may be too low	Please check and ensure the water supply pressure is $\geq 0.07\text{Mpa}$
	3.The filter may be blocked	Please replace a new filter .It has a service life of approx. half a year
	4.The nozzle may be blocked	Please replace a new nozzle
Low water temperature	1.The water temperature may be set at low grades	Please set the water temperature at high grade as per "adjusting temperature" of operating instructions
	2.Maybe the temperature of water supply is too low	Please set the water temperature at high grade as per "adjusting temperature" of operating instructions,or decrease the flow rate as per "adjusting water flow rate" of
The nozzle comes out slowly	When start washing function,the nozzle will be self-cleaning before coming out, and this will take some	This is normal
The water flows out but the nozzle do not come out	1.When start washing function,the nozzle will be self-cleaning before coming out .When the washing is over ,also have this feature	This is normal
	2.Maybe it is not used for more than 72 hours	This is normal. Not used for more than 72 hours ,when the user operates the washing ,it will open the self-cleaning for about 3 minutes
The dryer can not work	1. The power supply may not be opened	Please turn on the power
	2.Maybe not in the seating state	Please sit on the seat and adjust sitting position
	3.Maybe the cover is closed	Please open the cover and sit on the seat
	4.Maybe it is not used for more than 72 hours	Not used for more than 72 hours ,when the user operates the washing ,it will open the self-cleaning for about 3 minutes. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning
Low air temperature	1.The air temperature may be set at low grades	Please set the air temperature at high grade as per "adjusting temperature" of operating instructions
	2.The air heater can not work normally	Please contact local distributor
Night light is always off	1.Maybe in the bright environment.	When the night light is set at smart mode,the night light will not work when in the bright environment.
	2.The night light function may be closed.	Please open the night light function and adjust the night light mode as per "Light Setting" of operating instructions
Night light is always on	1.Maybe in the dark environment.	When the night light is set at smart mode,the night light will be always on when in the dark environment
	2.Something may be covered around the knob.	Recover the obstructions around the knob
	3.The night light may be set at always on mode	Please adjust the night light mode as per "Light Setting" of operating instructions
The nozzle goes back automatically when manual cleaning	1.The nozzle goes back after washing 5 minutes.	This is normal
	2.Maybe press the "stop" button	The manual cleaning will be stopped if press the knob or press the "stop" button on the remote control.
	3.Maybe the seated sensor detects that the seat is closing	Please do not put down the seat during the manual cleaning
The remote control is not functioning	1.Maybe there are not batteries in the remote control	Please install the correct batteries in the remote control
	2.Maybe the battery power is too low	When the battery power is too low the LED of grade will flash. Please replace the battery
	3.Maybe the code of the bidet and remote control is not the same	Please set the code of the remote control to the correct one .See "One-On-One Setting"
There are BEEP sounds when the bidet is working	There is a short BEEP when you are sitting down , and a long BEEP when you leave. Also there is a short BEEP when the bidet has received commands.	This is normal. You can turn off the sound. See "Sound Setting"
The bidet can not work normally	Maybe there is something abnormal	Please shut off the power and turn on after one minute. If the bidet still cannot work,please contact local distributor
The light around the knob flash twice with constantly BEEP	The water supply temperature may be too high	Please shut off the power and water supply,stop using the product, and then contact local distributor
The light around the knob keep flashing	There may be something wrong with the product	Please check if the electric power and water supply are normal, cut off the power and restart the product. If the bidet still cannot work,please contact local distributor



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

